

How to lubricate lever on Arbitrator

Below is an instruction on how to lubricate the lever on Arbitrator to remove friction between the lever and the T-bar.

1. Open lock and lever



2. Detach the Chin Guard from helmet



3. Lubricate the lever with 1 drop of chain lube in each cavity of the lever. Do not use excessive amount of oil. 1 drop is enough.



4. Attach the Chin Guard to the helmet and turn the lever back and forth a couple of times to spread the oil in the lever.



5. Close the lever and lock

