## Male part of Buckle change

Below is an instruction on how to assmble the male part of the buckle used on the retention system on the following models: Trooper, Trooper MIPS, Trooper SL, Trooper SL MIPS, Switcher, Switcher MIPS, Igniter, Igniter MIPS, Grimnir MIPS, Rooster and Rooster LE

1. Remove the male part of the buckle from the D-ring



2. Turn the D-ring around so that the chin pad is up against you. Place the D-ring in the new male part of the buckle.



3. Hold tight to the male part and pull the D-ring downwards until it snaps into place.



