


Occigrip replacement- Falconer 2Vi

1. Loosen the screw on the occigrip hanger. Make sure to hold on to the screw and the small part.

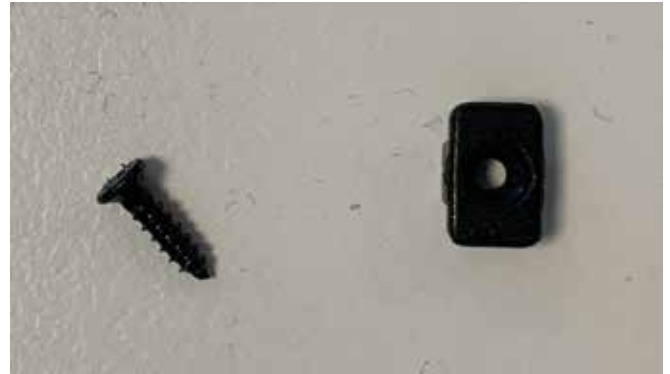

2. Cut away the mushrooms on all four places. Do this with care to not damage the helmet while cutting off the mushroom.



3. Remove the Occigrip. Loosen the velcro on the Mips Air LFL. You do not need to remove the Mips Air LFL from the helmet, ONLY loosen it from the Occigrip.

4. Make sure you have the correct size of the new Occigrip. The size is molded on the front of the new occigrip.



4. Assemble the new Occigrip into the helmet. Push all 4 mushrooms in place. You can push the remainder of the old mushrooms inside the snapbasket.



5. Position the occigrip hanger and place the part in the correct place. Tighten the screw so that the Occigrip hanger has some resistance when moving up and down.



6. Assemble the Mips Air LFL on the Occigrip again. Make sure to press on velcro points to make it stick correctly.